

# PART# 04-007

# CARGO BOX

## WILL FIT YAMAHA DRIVE

### INSTALLATION INSTRUCTIONS

#### INCLUDED:

- 2 MAIN BRACKETS
- BAGWELL BRACKET
- 2 CARGO BOX BRACKETS
- FRONT BRACKET BRACE



Main Brackets



Bagwell Bracket



Cargo Box Brackets



Front Bracket Brace

1  
Remove hardware from struts and take off canopy. Retain hardware. You will need it later.



2  
Remove hardware from gutters. Retain hardware from gutters. You will need it later. Remove gutters by sliding them upward.



# 3

Remove rear strut from both sides. Retain all hardware. You will need it later.



# 4

Remove seat back. Retain hardware. You will need it later.




# 5

Remove motor cover panel by popping out plastic rivets. Retain hardware. You will need it later.



# 6

Take off basket by removing hardware located inside motor compartment. Retain hardware. You will need it later.

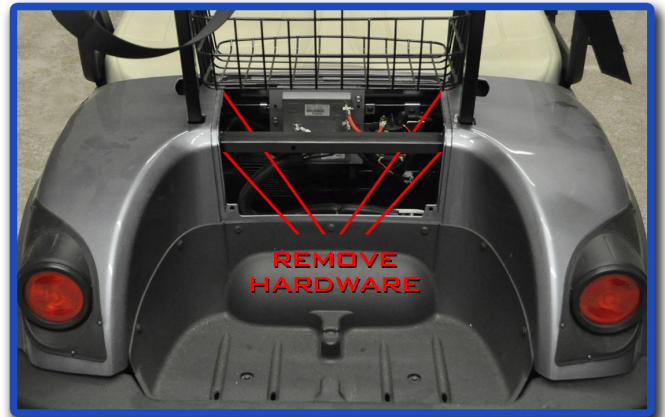

7  
Place front main brackets into golf cart where factory basket was removed. Install hardware removed in step 6.



8  
Attach rear struts to brackets using hardware retained from step 3.



9  
Attach front bracket brace to main brackets using 8mm hardware provided.



10  
Attach seat back to main brackets using hardware retained from step 4.



# 11

Remove factory bolts from bagwell and then make the hole larger by drilling it out with a 7/16 drill bit through the top and bottom of the frame.



# 12

Attach bagwell bracket using 10mm x 90mm bolts and tighten.



# 13

Attach cargo box bracket to main bracket using 10mm x 25mm hardware provided, hand tighten.



# 14

Attach cargo box bracket to bagwell bracket using 10mm x 25mm hardware, hand tighten.



# 15

Reattach canopy using retained hardware from step 1.



# 16

Attach cargo box using 10mm x 40mm hardware. Once all bolts are in place, tighten all hardware.



## DRIVE/ G29 CARGO BOX HARDWARE PACKS

- (2) 10MM X 90MM SHOULDER HEX BOLTS (BAGWELL BRACKET TO CART)
- (4) 10MM X 25MM SHOULDER HEX BOLTS (MOUNT BRACKETS TO MAIN BRACKETS & BAGWELL BRACKET)
- (4) 10MM X 40MM SHOULDER HEX BOLTS (CARGO BOX TO MOUNTING BRACKETS)
- (20) 10MM X 20MM X 2MM WASHERS
- (10) 10MM ANTI-SLIP NUTS
- (2) 8MM WASHERS
- (2) 8MM ANTI-SLIP NUTS